

## CLEANROOM ACCESSORIES

### PASS THROUGH HATCH

High quality pass through hatches for cleanrooms and containment facilities

*“Wherever there are cleanrooms and laboratories you will find Mach-Aire products playing an important role in the research and manufacturing programmes of the worlds largest companies and institutions.*

*Our capabilities, whether in technology, design, safety of operation, construction or service are also fully at your disposal”.*



**“IN” AND “OUT” PASS THROUGH HATCHES INSTALLED IN A CLEAN ROOM WALL**

#### OPTIONS

Mach-Aire Ltd Pass Through Hatches are available with options such as ventilation, HEPA filtration, electronic door interlocks, extract ducts. Inflatable door seals, internal shelves etc.

#### FUNCTION

Mach-Aire Ltd Pass Through Hatches are used to pass materials to and from clean rooms to support rooms. Their purpose is to help prevent cross contamination. The transferred materials will usually be surface sanitised before being placed in the hatch with either alcohol spray or with sterile wipes.

#### APPLICATIONS

- Pharmaceutical clean rooms
- Containment facilities
- Stem cell clean rooms
- Medical device clean rooms
- Biotech facilities
- Isolation units

#### FEATURES

- Mechanically interlocked doors
- Clear glass doors, nylon hinges
- Easy clean - resistant to aggressive cleaning agents
- Stainless steel base plate
- Shell constructed from PVC

Sterile and clean environments demand an absolute commitment to the control of hygiene and cleanliness. The consequences of failing to meet the required standards can be serious in pharmaceutical dispensing, production, public health and specialised patient treatments. Hatches should be easily cleanable, restrict cross contamination and provide a safe and comfortable position for the operator.



**Products and services for containment and clean air applications**

*Fume cupboards*

*Pharmaceutical Isolators*

*Downflow powder control booths*

*Clean rooms for NHS Pharmacy, Tissue Banks and industry*

*ACDP Containment laboratories*

*Modular clean rooms*

*Validation and testing*

*Microbiological safety cabinets*

*Horizontal and vertical laminar units*

*Specialised extract systems*

*Clean room accessories*

*Design & consultancy*

**Full compliance with relevant national and international standards**

## PRICE LIST


Model	Description	Price
Model A	External Dimensions	430w x 800h x 670d mm
	Internal Dimensions	320w x 740h x 658d mm
Model B	External Dimensions	710w x 660h x 462d mm
	Internal Dimensions	600w x 600h x 450d mm

These are standard size hatches, additionally Mach-Aire Ltd produce bespoke hatches to customers own requirements and dimensions. Prices exclude VAT, delivery and installation. Installation by arrangement.


## WARRANTY

Guaranteed free of manufacturing defects for 12 months

**FRONT ELEVATION**

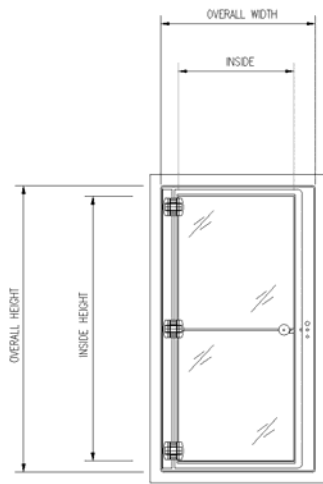

**SIDE ELEVATION**

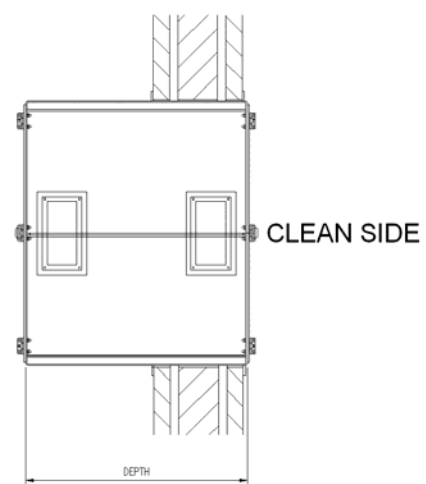

## **OTHER CLEAN ROOM ACCESSORIES AVAILABLE**

CLEAN ROOM VISION PANELS

PASS THROUGH CHAIRS

CLEANROOM LIGHT FITTINGS

STEPOVER BENCHES

## **DATA SHEET 703**

Mach-Aire Ltd  
 Bridge Street  
 Horwich Bolton BL6 7BT  
 United Kingdom



Tel. ++44 (0)1204-668905  
 Fax. ++44 (0)1204-668906

email. sales@machaire.co.uk  
 web www.machaire.co.uk

